



200mm x 32mm square boards / Timber frame


MATERIALS:

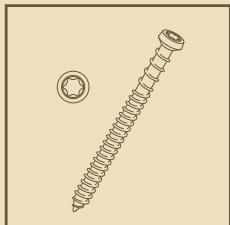


12g 65mm self-driving screws

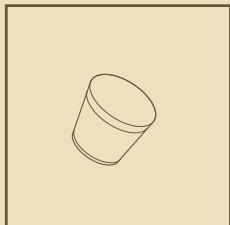


Matching plugs

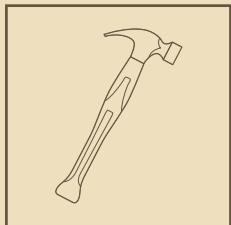


Small head hammer (<15mm)

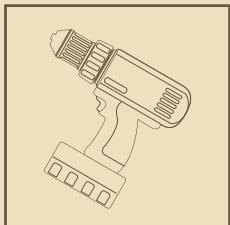

Drill / driver

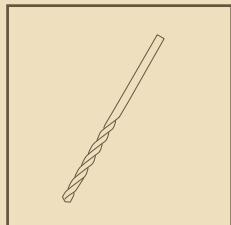


4.2mm Drill bit (or 4.5mm)

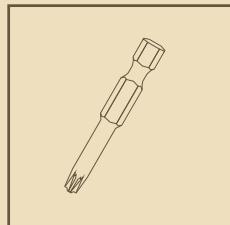


T20 drive bit




OVERVIEW:

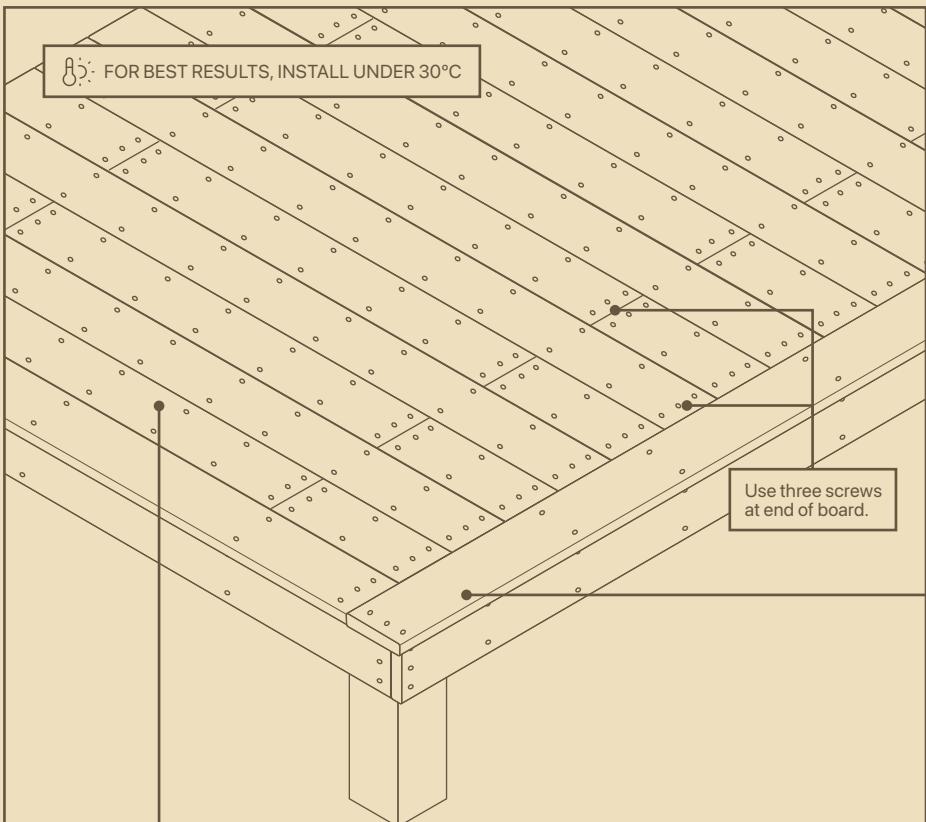

EXPOSED BOARD FINISH

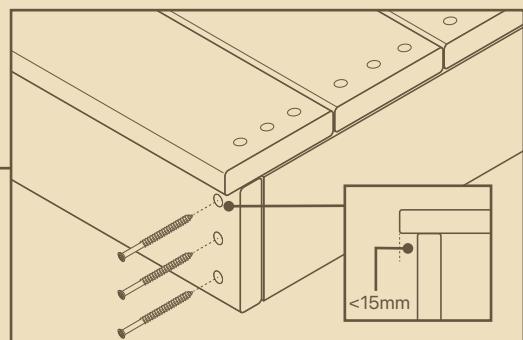

FASCIA BOARD FINISH

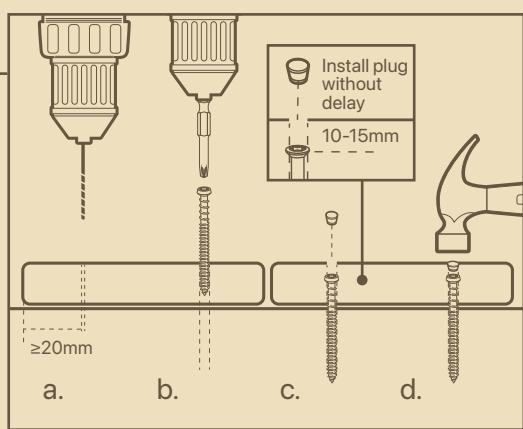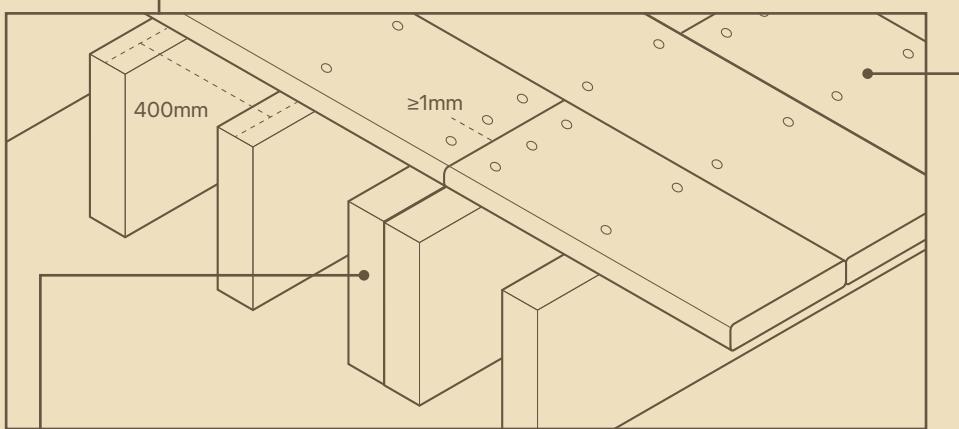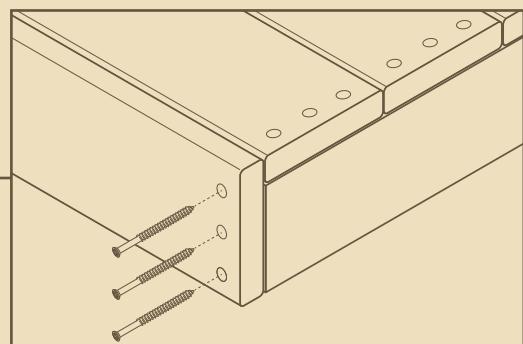


Where there is a butt join, add a double joist.


Two screws for each joist.

200mm x 32mm square boards / Metal frame


MATERIALS:

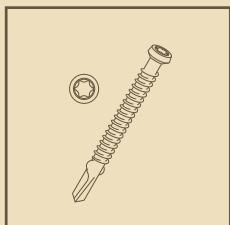


12g 45mm self-driving screws

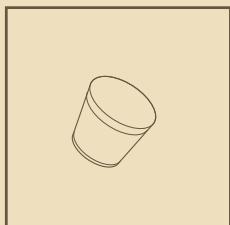


Matching plugs

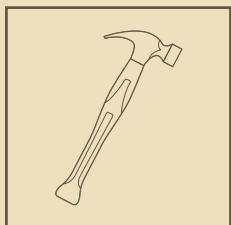


Small head hammer (<15mm)

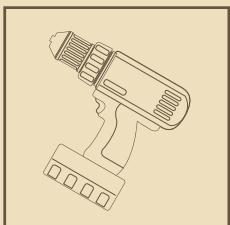

Drill / driver
✖ NO IMPACT DRIVER

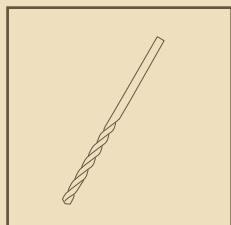


4.2mm Drill bit
(or 4.5mm)

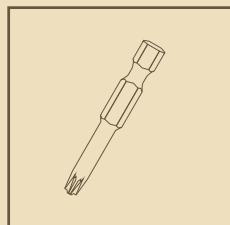


T20 drive bit




OVERVIEW:

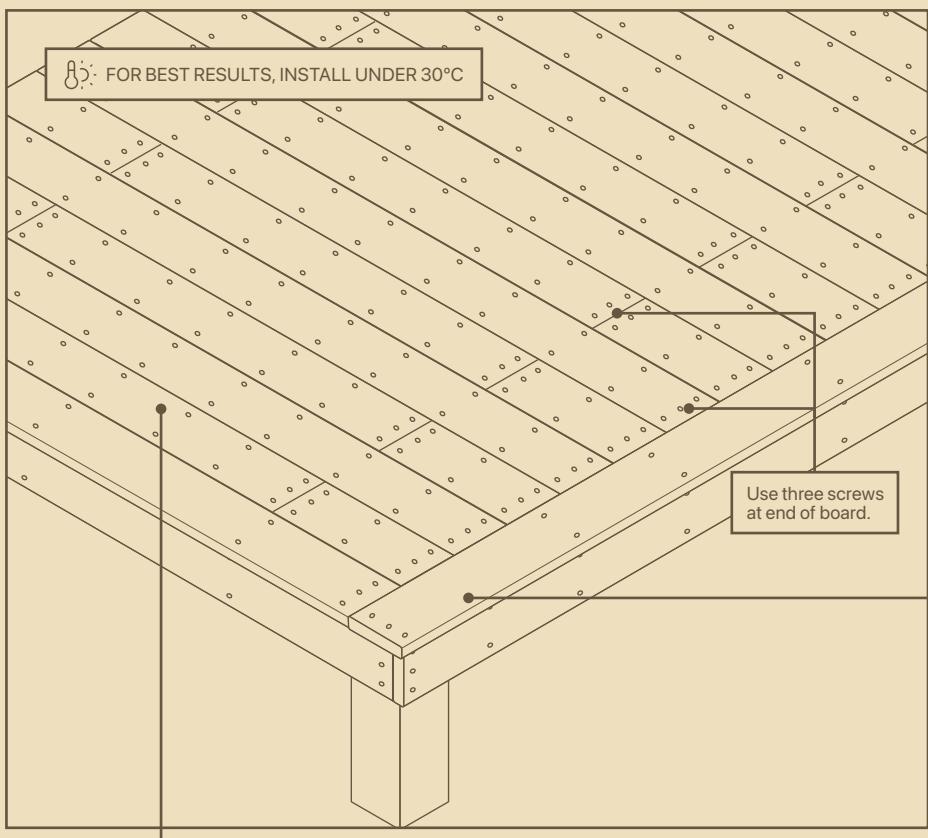

EXPOSED BOARD FINISH

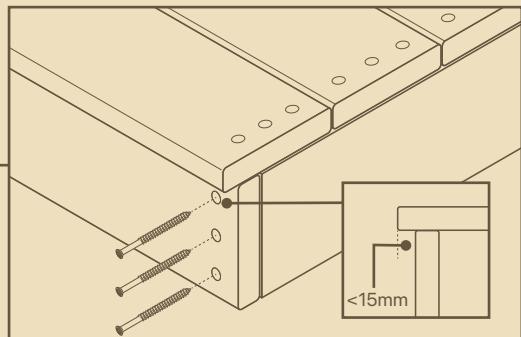

FASCIA BOARD FINISH

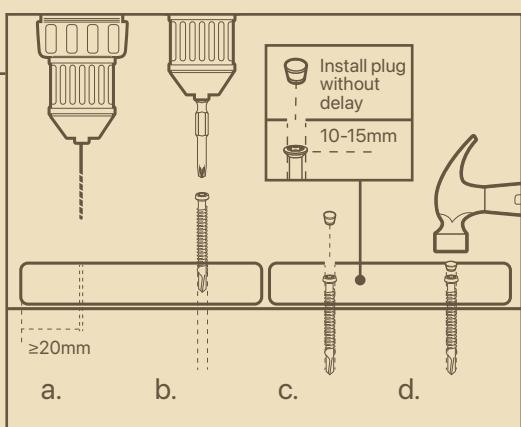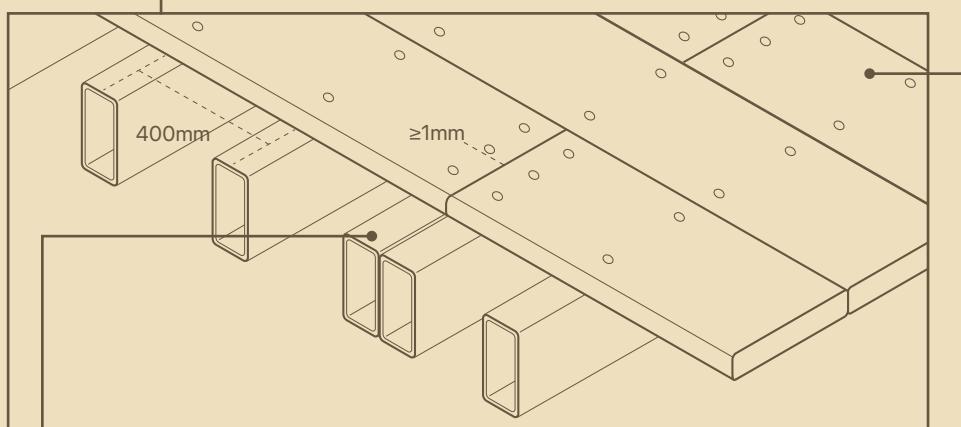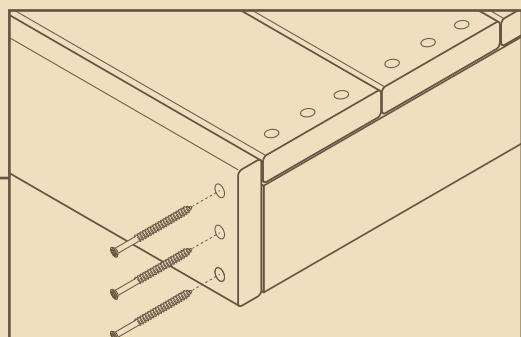

Where there is a butt join, add a double joist.

Two screws for each joist.